


**RIGGIES™ TUBING MOUNT
NON-SLIP, ADJUSTABLE
TENSIONING SHOCK CORD
INSTALLATION INSTRUCTIONS**

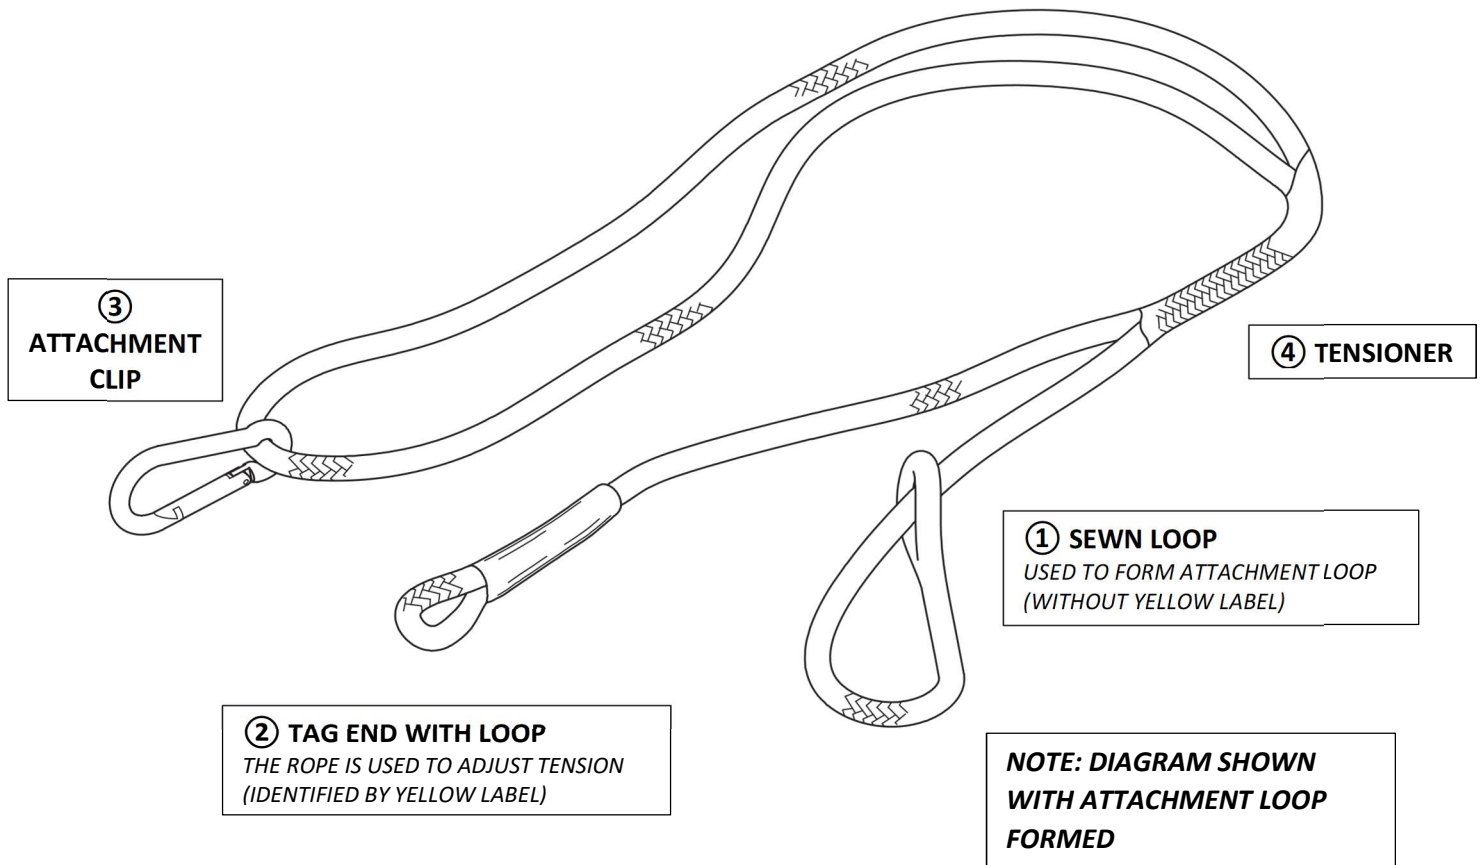

1. USING THE DIAGRAM, LOCATE NUMBERED PARTS (1-4).
 2. FORM THE ATTACHMENT LOOP, BY PLACING THE SEWN LOOP ① OVER THE TOP AND AROUND ANY BOAT TUBING. THE SEWN LOOP IS THE LOOP WITHOUT THE YELLOW LABEL.
 3. HOLD THE TAG END WITH LOOP (YELLOW LABEL) ② AND ATTACHMENT CLIP ③ TOGETHER AND PASS THEM THROUGH THE SEWN LOOP ①.
 4. SLOWLY PULL PARTS ② & ③ UNTIL ATTACHMENT LOOP TIGHTENS AROUND THE BOAT TUBING.
 5. TAG END WITH LOOP ② SHOULD HANG FREE TOWARDS BOAT DECK.
 6. CONNECT ATTACHMENT CLIP ③ TO EXISTING OUTRIGGER HALYARD LINE LOCK PULLEY.
 7. FIRMLY HOLD TENSIONER ④ AND PULL ROPE TAG END ② DOWNWARD UNTIL DESIRED OUTRIGGER LINE TENSION IS ACHIEVED.
- NOTE: TO LOOSEN OUTRIGGER LINE TENSION REVERSE STEP 7. FIRMLY HOLD TENSIONER ④ AND PULL ROPE ② UPWARD.

⚠ WARNING: THE IMPROPER USE OF ROPE MAY BE DANGEROUS