


RIGGIES® T-TOP or HARDTOP MOUNT INSTALLATION INSTRUCTIONS AND USER GUIDE

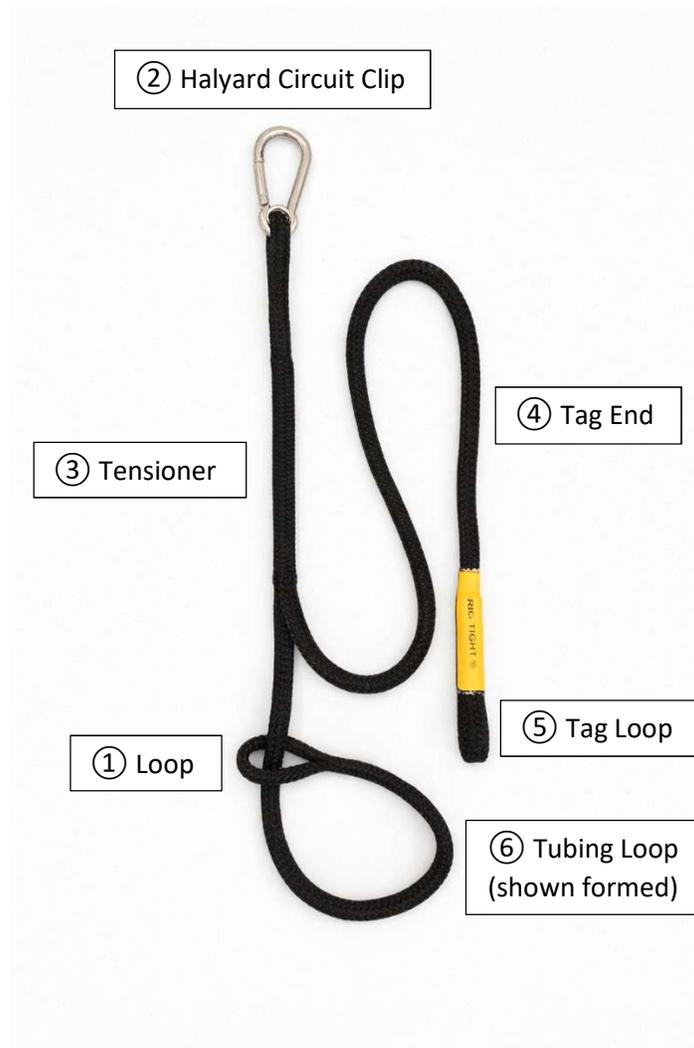

INSTALLATION INSTRUCTIONS

Wrap ① under and around the T-Top or Hardtop tubing. ⑥ forms by inserting ② & then ⑤ thru ① and slowly pulling them until ⑥ is snug. ④ should be facing down towards the boat. Attach ② to halyard circuit.

HOW TO ADJUST TENSION

Look closely at ③ notice how ④ passes thru it, creating both upper and lower entry and exit points. To increase tension, firmly hold ③ and while holding ④ near the lower exit point, slowly pull down towards the boat. To decrease tension firmly hold ③ and while holding ④ near the upper exit point, slowly pull up away from the boat.